

öffentlich  $\boxtimes$  intern  $\square$  vertraulich  $\square$  streng vertraulich  $\square$ 

## **1** Installation Instructions

Please wire the components of the starter kit according to the following sample instructions.

Caution: Only qualified electricians are allowed to work on electrical systems!



## 2 Accessing the HEITEC Solution Center

Login to the HEITEC Solution Center. You can access the HEITEC Solution Center at the following URL:

https://staging.heitec-solutioncenter.io/hub/#/home

You will be asked to enter your access data in the access area. Use the credentials provided to you.

HEITEC engineering solutions Login to your account
Username or email*
Password*
Sign In

After successful authentication you will be automatically connected to the overview page of the HEITEC Solution Center, the Hub. In the Hub, all available applications are displayed as tiles and can be accessed directly.

## 3 Adding Assets

To feed the applications with data, you must first create the required assets. To do this, navigate to the cogwheel in the top right corner and select "Assets" from the menu.



You are now in Asset Management. Note that in the following illustration, a site, a line and a machine have been created as examples. This hierarchy is very important for the operation of some applications and must be respected.

Create your hierarchy by clicking on the "Create new asset" button at the top right of the screen.

III HE	Asset Manager	nent				\Xi 🍄 MR
Assets	Allocated assets	Asset pool	Asset types Maps	Devices/Sensors		Search Q. + Create new asset
	Name	Type	Documents	Created/Updated at	Change order	Expand all Collapse all
~	Heitec@SPS2023	Site		27.09.2023   10:17		Change parent asset to 🗸 🗧
~	Messelinie	Line		27.09.2023   10:18		Change parent asset to 🗸
	Schott Packaging Device	Machine	2	25.09.2023   12:35		Change parent asset to 🗸

You can now create an asset in the following view. To follow the hierarchy, start with the site, followed by the line and then the machine. Define the type of asset by selecting it from the drop-down menu.

Please also give the asset a name.

If you have created a "Site" type asset, you will also have the option of entering your sitespecific energy costs for electricity, gas, compressed air and process water. All assets assigned to the site will automatically inherit this information.

Save your entries by clicking "Create asset" at the top right of the screen.

HEITEC Asset Management		宮 🏟 ME
		Canted Crede asset
Asset details	Upload image	Asset aliases Add alias
Asset trans * Asset type * Freese choose Description	Panet asset None EARDS type	No allisses found
Dynamic properties	Documents Add docume	et [6 Asset history
No properties found	No documents found	No activities found
Fees	Tag mappings	Search tag vaniable, data type or address
Electropy         Compressed ar           0         ct/Wh         0         ct/m*           Natural gas         Water         ct/m*         0         ct/m*		

## 4 Adding Devices and Sensors

The following assumes that you have created your assets according to the hierarchy specifications.

Now add devices and sensors.

To do so, navigate to the Devices/Sensors tab in the Asset Manager.

In the screenshot below, an IIoT gateway has already been created and several sensors have been added.

To add your own gateway, start the wizard by clicking the "Add new device/sensor" button in the upper right corner.

Asserts)	Search Q	Add new devloe/sensor 🔺 via QR Scan Manually
4486451		
1486ef51		
486ef51		
	Schott Packaging Device	
486ef52	Schott Packaging Device	
486ef53	Schott Packaging Device	
486ef54	Schott Packaging Device	
1486ef55	Schott Packaging Device	
C8	5865ef53 :865ef53 :885ef54	ck486ef53 Schott Packaging Device Schott Flackaging Device

You will be asked if you want to add the gateway via a QR code or manually. For the subsequent process, you will need to allow your browser to use the camera on your laptop or the camera on your smartphone.

Use the QR code found on all components of the starter kit and select "via QR scan".

The QR code scanner will launch. Please scan the code on your IIoT Gateway. Make sure you have good lighting conditions to ensure a quick scan.

HE	Asset Manageme	nt	QR-Code scan	×	X Q	MR
Assets			and the second s		Search Q Add new device/sensor 💌	
	Name	D				
~	IOT Gateway	cace72d42df44e7b8227133c8486ef51		2 Device	:	
	Leistungsmessung	cace72642df44e7b8227133c6486af52		g Device	1	
	Druckkuftverbrauch	cace72d42df44e7b82277133c8486ef53		g Device	:	
	MachineOn	cace72d42df44e7b8227133c8486ef54		statistic teaching Device	:	
	MachineRunning	cace72042df44e7b8227133c8495ef55		Schott Packaging Device	:	
	MachineCounter	cace72d42df44e7b8227133c8486ef56		Schott Packaging Device	1	

After a successful scan, you will be taken to the following dialog, which provides prepopulated information about the scanned component. At this point, the dialog will ask you for two entries.

- 1. For which machine (asset) is the component used?
- 2. Which component is involved here?

Please make the appropriate selection and complete the process by clicking the "Save changes" button in the upper right corner.

HEITEC Asset Management		
RCodeDevice		Can
RCodeDevice		
Device/sensor ID *	Parent device	
1c6414282be64081bb279b468760c9b9	None 🗸	
Device/sensor name *	Description	
QRCodeDevice	This device was created with a QR code.	
Linked asset		
None	<u> </u>	
Manufacturer	Sensor Type *	
Shelly	Power 2 ~	
Serial No		
00-B0-D0-63-C2-26		

You have added your first component. Repeat the process analogously for all other components in the starter kit, making a distinction when entering the sensor type.

From now on, the sensors will associate your measurement data with the machine selected in "Linked asset" and can now be monitored in the applications.